

MERITOR WABCO

Technical Bulletin

Installing the Meritor WABCO Rear Aero Auto Deployment System

Requires InfoLink™-Equipped ECU/Valve Assemblies 400 500 105 0 or 400 500 106 0

Hazard Alert Messages

Read and observe all Warning and Caution hazard alert messages in this publication. They provide information that can help prevent serious personal injury, damage to components, or both.

How to Obtain Additional Maintenance, Service and Product Information

If you have any questions about the material covered in this publication, or for more information about the Meritor WABCO product line, please contact the Meritor OnTrac™ Customer Call Center at 1-866-OnTrac1 (866-668-7221) or visit our website:

meritorwabco.com

For further information related to installing the rear aerodynamic panels, panel latches and panel linkage, visit <http://www.stemco.com/trailertail-installation/>. For any concerns or technical support related to the rear aerodynamic panels, panel latches and panel linkage, contact STEMCO at 1-888-283-TAIL (8245) or email at atdcustomerservice@stemco.com.

How to Obtain Tools, Kits and Supplies

To obtain parts, call Meritor's Commercial Vehicle Aftermarket at 888-725-9355.

For trailer manufacturers, contact Meritor WABCO trailer engineering for the system End of Line tester.

For field service scenarios, no End of Line tester is required. Refer to [Meritor WABCO Maintenance Manual MM-0180](#), Enhanced Easy-Stop™ Trailer ABS with PLC, for system troubleshooting procedures.

NOTE: Application Sheet WT-0212 must be completed and submitted to Meritor WABCO Trailer Engineering for approval prior to installation. [Application Sheet WT-0212](#) can be found at meritorwabco.com.

Introduction

The Rear Aero Auto Deployment system uses the ABS wheel speed signals and generic inputs and outputs to trigger the deployment of the rear aerodynamic panels. Each panel is actuated by a panel-mounted electronic latch, which unlocks once the vehicle speed has exceeded 35 mph (56 kph). The linkage then unfolds the rear aerodynamic panels. The Rear Aero Auto Deployment panels retract automatically when the rear trailer doors are open and latched to the side of the trailer.

Procedures

Installation

WARNING

To prevent serious eye injury, always wear safe eye protection when you perform vehicle maintenance or service.

Remove all pressure from the air system before you disconnect any component. Pressurized air can cause serious personal injury.

Park the vehicle on a level surface. Block the wheels to prevent the vehicle from moving. Support the vehicle with safety stands. Do not work under a vehicle supported only by jacks. Jacks can slip and fall over. Serious personal injury and damage to components can result.

Ensure the trailer has correct electrical grounding; refer to SAE Specification J1908.

When you work on an electrical system, the possibility of electrical shock exists, and sparks can ignite flammable substances. You must always disconnect the battery ground cable before you work on an electrical system to prevent serious personal injury and damage to components.

1. Wear safe eye protection.

2. Park the vehicle on a level surface. Block the wheels to prevent the vehicle from moving.
3. Disconnect the electrical power before starting this procedure.
4. Connect the Rear Aero Auto Deployment cable, part number 449 820 119 0 (1M) or 449 821 119 0 (2M), into the ECU's modulator connector port and secure it with the locking tab. Ensure there is adequate clearance for deployed Rear Aero Auto Deployment panels, if installed. Figure 1 and Figure 2.

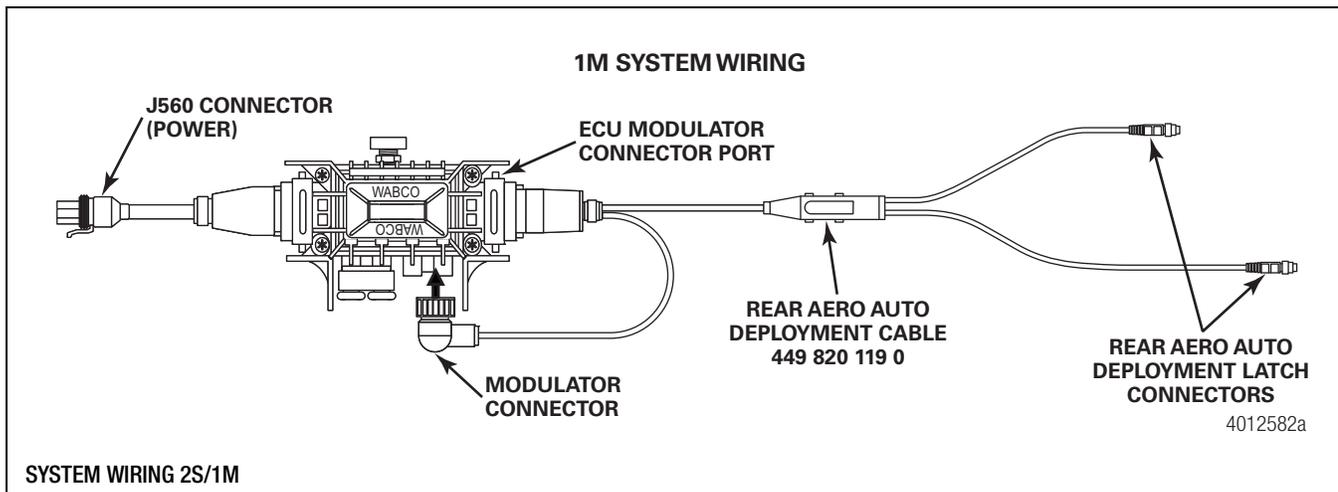


Figure 1

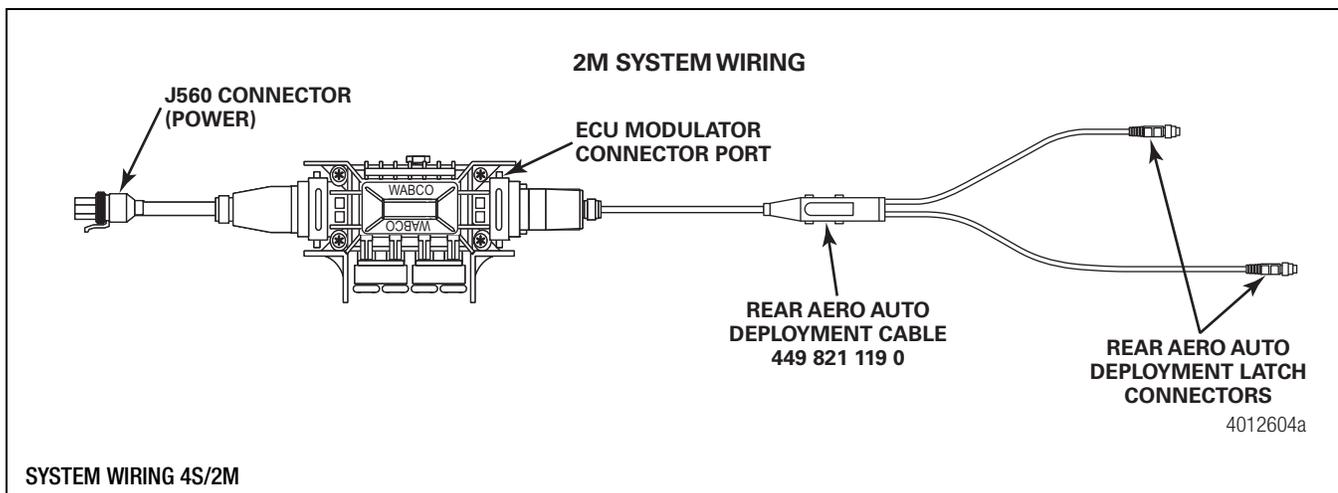


Figure 2

5. For 2S/1M installations only: Remove the shipping cap from the modulator connector and plug it into the single modulator valve. Ensure that the locking collar on the modulator connector is securely locked into place within the mating connector on the modulator valve. Figure 1.

CAUTION

If the connector is not secured correctly to the wire snake during routing, damage can occur to the cable/connector.

NOTE: Review and adhere to all Meritor WABCO cable routing and strain relief guidelines noted at the end of this publication as well as in [TP-1593](#).

- For slider applications, route the cable down the bogie accordion cord, then over to one side of the trailer as shown in Figure 3. Route the cable harness down the length of the trailer starting at the ABS unit, running the cable towards the rear of the trailer. Figure 4. The ends of the cable split into curb side and street side latch connectors. Use zip ties along the accordion cord as needed to secure the cable.

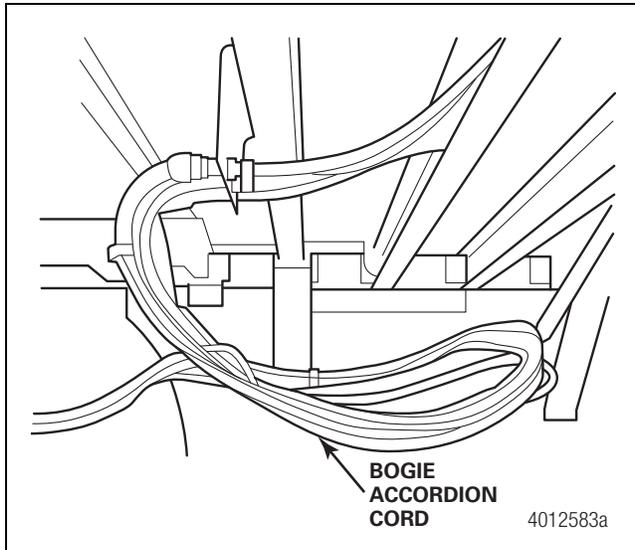


Figure 3

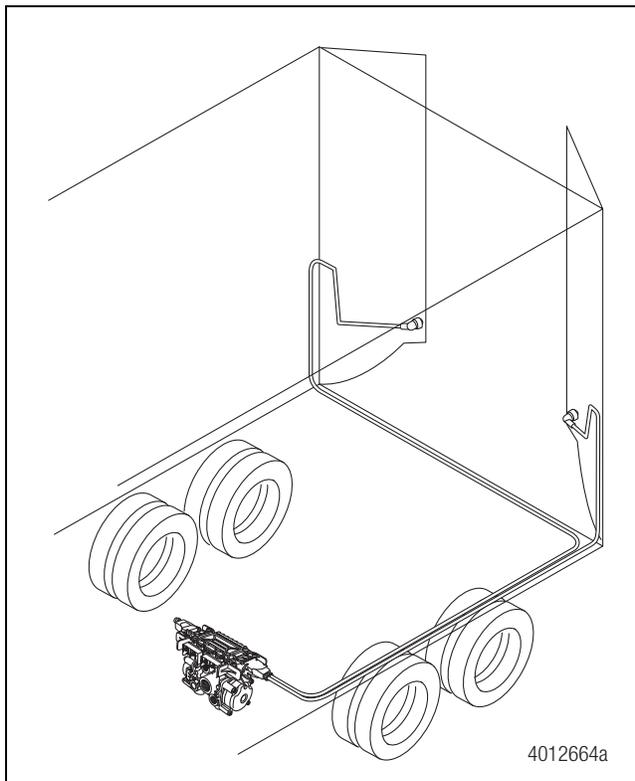


Figure 4

- Complete the steps in STEMCO's AutoDeploy™ Installation Guide before proceeding at:

www.stemco.com/f/qbin/ATD003047-Install-Manual-TrailerTail-ZeroTouch.pdf

- Secure the cable to the frame of the trailer using zip ties to ensure cable is:
 - Not sagging away from the frame
 - Providing slack between tie points to compensate for flexing of the trailer sub-frame

Tighten the zip tie such that the cable does not slide freely within the tie, but also not tight enough to overly compress the cable.

Programming the ABS Controller for Rear Aero Auto Deployment

The following process is used to program the InfoLink ABS controller for Rear Aero Auto Deployment functionality using TOOLBOX™ 12.2 or greater.

NOTE: The Rear Aero Auto Deployment function can only be enabled on InfoLink capable ECUs (part numbers 400 500 105 0 and 400 500 106 0).

- Activate TOOLBOX™ Software on your PC. Select **GIO Configuration** option from the **Modify** pull-down menu. Figure 5.

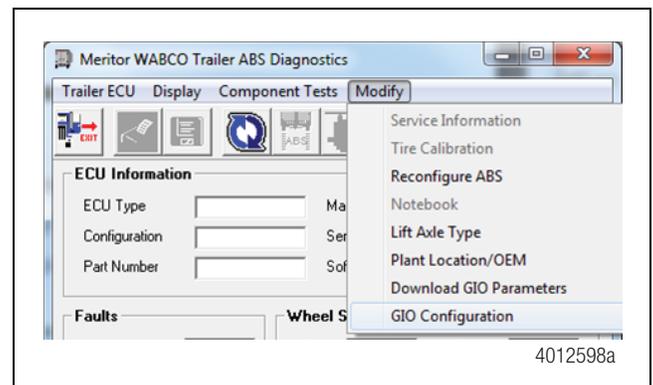


Figure 5

- Select the **Rear Aero Auto Deployment** from the **GIO Configuration** menu and select **Download** to initiate the programming of the ABS controller. Figure 6.

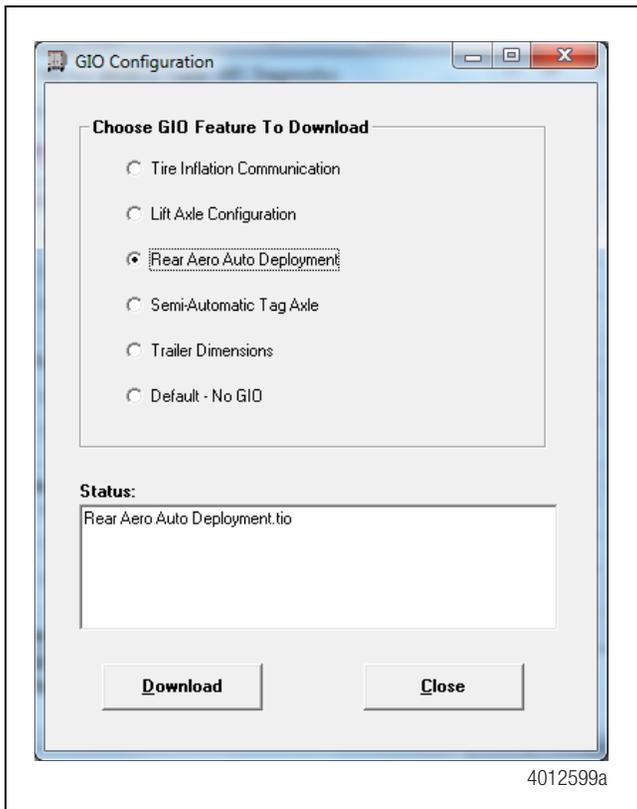


Figure 6

- When a confirmation message appears, the programming is complete. Press the **Close** button to continue. Figure 7.

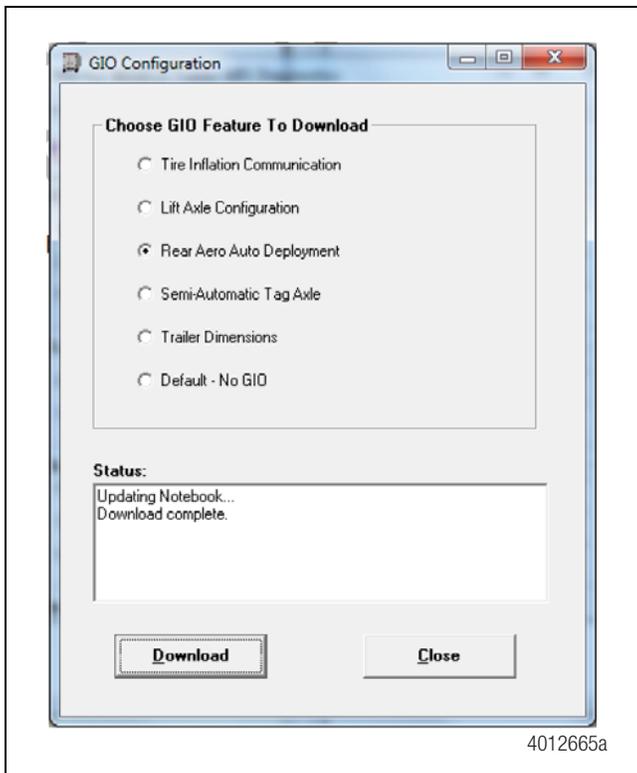


Figure 7

System Verification

After the ABS controller has been programmed, the ECU programming can be verified by accessing the “Notebook” feature within TOOLBOX™ Software.

To access the “Notebook” section in the TOOLBOX™ Software, perform the following.

- Select **Modify** from the top toolbar of the Trailer ABS TOOLBOX™ Software application.
- Select **Notebook** to confirm Rear Aero Auto Deployment.tio is shown in the “Service Information” field. Figure 8.

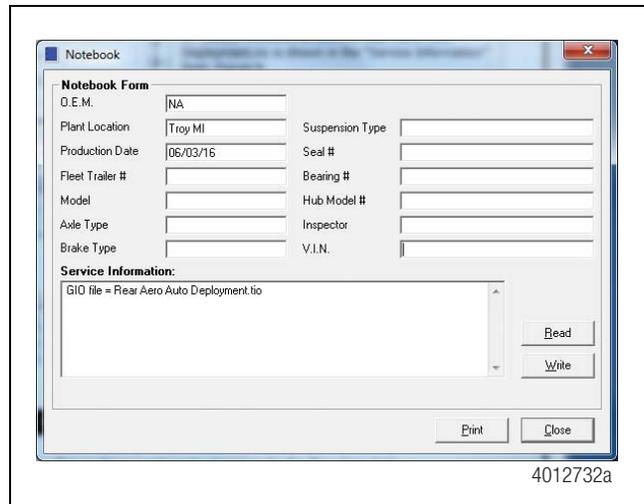


Figure 8

For further verification, a short vehicle test can be performed. Prior to beginning the vehicle test, latch the panels in the closed position. Ensure constant power is at the trailer J560 plug and the ABS Warning Lamp is not illuminated. Drive the vehicle until 35 mph (56 kph) has been exceeded. Once 35 mph (56 kph) has been exceeded, the latches should unlock and the panels should open. If the issue persists, refer to Maintenance Manual MM-0180 for a troubleshooting guide or the STEMCO Field Service Guide.

Cable Routing Guidelines

All wires should be tightly secured to a solid member in intervals not greater than 18-inches (457 mm) to avoid excess cable vibration and potential snags with road debris. The correct cable installation should not allow the cable to slide through beam clamps/zip ties, but not tight enough to pinch the internal wires. Refer to technical bulletins TP-20212 and TP-1593 for more information. Figure 9.

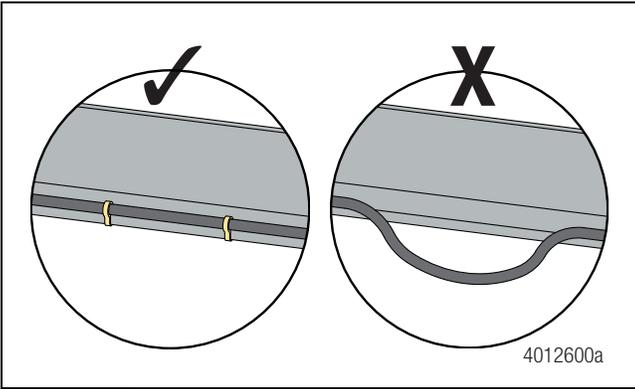


Figure 9

Wiring should NEVER go through any bare, unprotected metal holes. Use grommets, caulk or wire wrap to protect wire from premature wear. Figure 10.

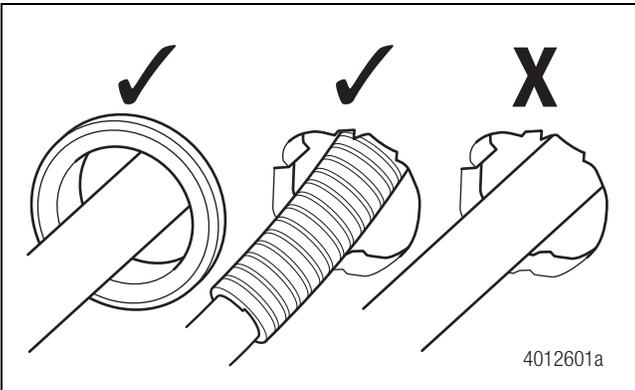


Figure 10

When routing the cable through the wiring channel on the edge or center of the trailer, secure the shorter leg of the latch connectors to the longer leg to ease wire routing. Figure 11.

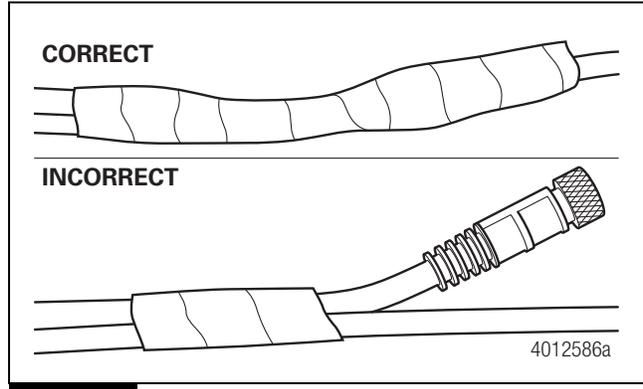


Figure 11

When using a wire snake to pull the cable up through the frame, make sure to tape the connectors correctly to the wire snake. Figure 12.

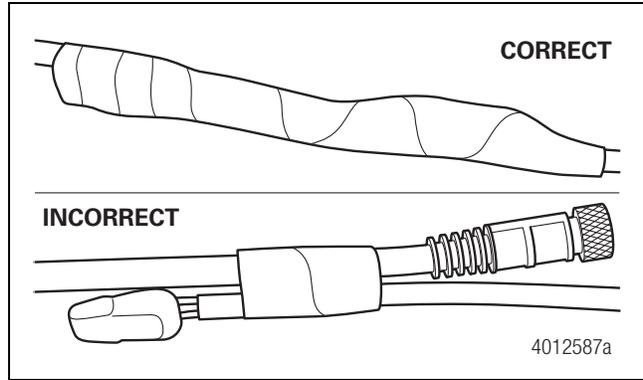


Figure 12

MERITOR WABCO

Meritor WABCO Vehicle Control Systems
 2135 West Maple Road
 Troy, MI 48084-7121 USA
 866-OnTrac1 (668-7221)
 meritorwabco.com

Information contained in this publication was in effect at the time the publication was approved for printing and is subject to change without notice or liability. Meritor WABCO reserves the right to revise the information presented or to discontinue the production of parts described at any time.

Copyright 2016
 Meritor, Inc.
 All Rights Reserved

Printed in USA

TP-16107
 Revised 10-16
 (16579)